

REVISED PRO-LOK GLSF-08FP INSTRUCTIONS

INITIALIZATION

The safe can be opened with any fingerprint before any setup is complete.

REGISTERING THE MASER FINGERPRINT FOR THE FIRST TIME

1. Press the GREEN RESET button located on the inside of the door panel.
2. Once the fingerprint window illuminates, place your finger on the fingerprint reader. The unit will beep and the green light will flash.
3. Remove finger.
4. Once the fingerprint window illuminates, place the same finger on the fingerprint reader AGAIN. The unit will beep and the green light will flash.
5. Remove finger.
6. Once the fingerprint window illuminates, place the same finger on the fingerprint reader A THIRD TIME. The unit will beep and the green light will flash.
7. The green light will flash indicating the master fingerprint registration was successful.

Note: The fingerprint must make direct contact with the fingerprint reader. (Careful of long nails)

REGISTERING FINGERPRINTS (ONCE THE MASTER FINGERPRINT HAS BEEN REGISTERED)

1. Press the GREEN RESET button located on the inside of the door panel.
2. Once the fingerprint window illuminates, place the Master Fingerprint on fingerprint reader once for authorization. The unit will beep and the green

light will flash. Remove Finger.

3. Once the fingerprint window illuminates, place the additional user's fingerprint on the fingerprint reader. The unit will beep and the green light will flash.
4. Remove finger.
5. Once the fingerprint window illuminates, place the same finger on the fingerprint reader AGAIN. The unit will beep and the green light will flash.
6. Remove finger.
7. Once the fingerprint window illuminates, place the same finger on the fingerprint reader A THIRD TIME. The unit will beep and the green light will flash. The green light will flash indicating fingerprint registration was successful.

Note:

- The fingerprint must make direct contact with the fingerprint reader.
- The module has a total capacity of storing 29 fingerprints.

DELETING ALL FINGERPRINTS

1. Hold the RED RESET button inside the safe
2. Press the POWER button on the outside panel.

The green light will flash indicating that all fingerprint registrations have been cancelled.

OPENING THE SAFE

1. Press the POWER button on the outside panel.
2. Place the finger on the fingerprint reader and wait for the green light illuminate indicating a successful recognition.
3. Turn the knob to the right to open the safe.

Note: If you do not open the safe within the allotted time frame, the operation must be repeated.

CLOSING THE DOOR

1. Turn the knob to the left to close the safe.

Note: For your convenience we have engineered a manual override system into your safe. If the safe cannot be opened with the registered fingerprint or it has no power, please open the safe with the override key.

NEVER STORE THE KEYS IN THE SAFE

www.PRO-LOK.com

GLSF-08FP

REVISED INSTRUCTIONS INSIDE
OPEN THIS SLEEVE

GLSF-08FP

STOP!

GLSF-08FP

GLSF-08FP