



## **REVISED PRO-LOK GLSF-10FPM INSTRUCTIONS**

### **INITIALIZATION**

1. Remove the batteries from the battery pack.
2. Press the START button (located on the front faceplate) to release the power.
3. Press and hold the reset button located inside the door (red button near the door hinge) and reinstall the batteries. A long beep sounds and the green light flashes.
4. After a few seconds the module sounds 2 long beeps and the green light flashes twice. This indicates the initialization was successful. At this time you can release the reset button.

The safe can be opened with any fingerprint after initialization.

Note:

- HOLD the reset button after you install the batteries until the safe is initialized.
- It is suggested that you perform the Initialization before using the safe for the first time. This will delete all the fingerprints in the safe and put it in standby mode.

### **REGISTERING FINGERPRINTS**

1. Press the RED RESET button located on the inside of the door panel.
2. Once the fingerprint window illuminates, place your finger on the fingerprint reader. The unit will beep and the green light will illuminate.
3. Remove finger.
4. Once the fingerprint window illuminates, place the same finger on the fingerprint reader AGAIN. The unit will beep twice and the green light will flash, indicating a successful registration.

Note: The fingerprint must make direct contact with the fingerprint reader. (Careful of long nails)

### **SAFE OPENING WITH REGISTERED FINGERPRINTS**

1. Press the START button (located on the front faceplate), to illuminate the fingerprint reader.
2. Place the fingerprint on the fingerprint reader. A long beep will sound if the match is successful
3. The door will open automatically.

If the match is unsuccessful, the red light will flash followed by 2 short beeps.

Note:

- The safe will open with any fingerprint before you register a fingerprint
- The fingerprint must make direct contact with the fingerprint reader.
- If the door is left open in the unlock position, the safe's alarm feature will be activated indicating the safe is in the unlocked position. To deactivate the alarm, lock the safe.

### **LOCK THE DOOR**

When the safe is open, it can be locked in 2 ways:

- 1) Close and hold the door to initialize the automatic door.
- 2) Press the START button and close the door.

Note: For your convenience we have engineered a manual override system into your safe. If the safe cannot be opened with the registered fingerprint or it has no power, please open the safe with the override key.

**NEVER STORE THE KEYS IN THE SAFE.**

**[www.PRO-LOK.com](http://www.PRO-LOK.com)**